

RT37 Hand transmitter

The RT37 hand transmitter is used to operate and check the status of the RCJ05 and RCM04 awning controls.

Due to the bidirectional operation of the RT37, it is not only possible to check the status of the sun protection function (ON or OFF) but also to control the status directly.

The awning can be moved manually by using the UP/STOP/DOWN direction buttons.




RT37E5001-01-02K
also available in black

Technical specifications

Coding	factory coding with Easywave Telegram A/B/C and EasywavePlus Telegram (awning)
Frequency	868.30 MHz
Channels	1
Range	typically 150 m in good free-field conditions
Power supply	1x 3V battery, CR2032
Operating indicator	4 LEDs (radio signal, error, sun protection active/inactive)
Operation	transmission lasts as long as the button is pressed (maximum 36 seconds)
Function	see Models
Operating temperature	-20 °C to +60 °C
Dimensions	38 x 109 x 14 mm (without wall holder)
Weight	37 g (including battery)
Color	glossy white similar to RAL 9003 glossy black similar to RAL 9005

Models

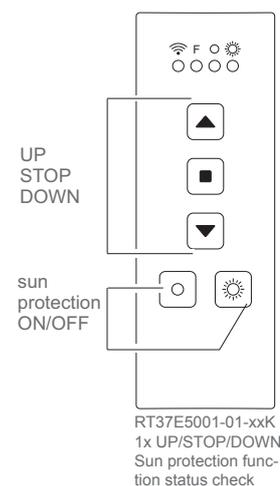

Scope of delivery

- Hand transmitter including battery
- Wall holder
- Mounting material
- Operating manual

Accessories (optional)

- | | |
|-----------------|---------------------------|
| RT32-ACC-01-02P | Wall holder, glossy white |
| RT32-ACC-01-22P | Wall holder, glossy black |



RT32-ACC-01-02P



RT32-ACC-01-22P

Models

Product numbers	Description	Function
RT37E5001-01-02K	Hand transmitter 1-channel, glossy white	1x UP/STOP/DOWN
RT37E5001-01-22K	Hand transmitter 1-channel, glossy black	Sun protection function status check