SL01 Light sensor



The SL01 light sensor cyclically measures the current brightness level and transmits this via radio.

The light sensor may only be used in connection with the RTS07 time switch.

If the sensor battery is running low, this is indicated on the display of the RTS07 radio time switch. $\,$



SL01E5001-01-01K

Technical specifications

EasywaveSensor telegram *) 868.30 MHz
368.30 MHz
ypically 150 m in good free-field conditions
x 3V-battery, CR2032
approx. 2,000lx to 80,000lx
approx. 2lx to 250lx
0 °C to +70 °C
Ø 40×12 mm
3 g (including battery)
2

^{*)} can only be programmed in RTS07

Scope of delivery

- · Light Sensor
- Battery
- · Adhesive pad
- · Operating manual

Accessories (optional)

ACC-T00-01-23P	Housing key
ACC-SEA-01-00P10	O-ring seal, 10 pieces
ACC-FIX-06-00P10	Adhesive pad, 10 pieces







ACC-T00-01-23P

ACC-SEA-01-00P10

ACC-FIX-06-00P10

Models

Product number	Description	
SL01E5001-01-01K	Light Sensor, Easywave, 1-channel, white	

RADIO SYSTEMS: Flexibility | Convenience | Energy efficiency | Securit